


LASER SCANNER ZLDS202WELD

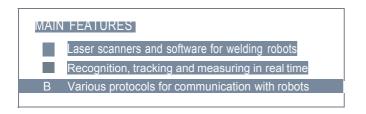


Laser Scanners ZLDS202 Weld Series. Working ranges					
Range	s′R	MR,	Xsmr	Xemr	Laser
25-65-21-25	65	25	21	25	
130-70-35-86	70	130	35	86	Class 2N
250-90-65-180	90	250	65	180	
For the rest parameters see "Overall specifications" in the previous page.					

ZLDS202Weld-65/25-21/25 and ZLDS202Weld-90/250-65/180

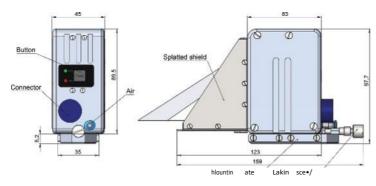


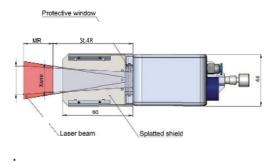

ZLDS202Weld-70/J30-35/86

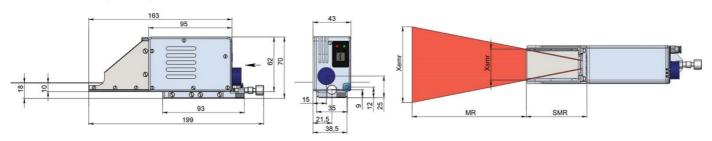

STEP 1

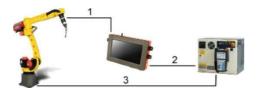


Connect equipment in accordance with functional diagram:

- Connection between the scanner and ZSY Controller (or PC) with ZSY Lamia
- 2. Connection between ZSY Controller (or PC) with ZSY Lamia and the robot controller
- 3. Connection between the robot and the robot controller


STEP 3

Select Robot Exchange Protocol

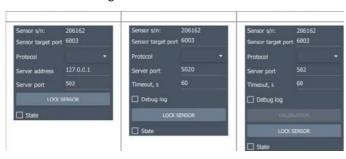

STEP 2

Select Template

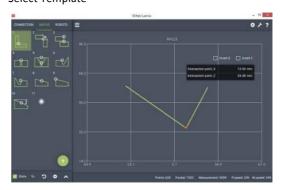

STEP 4

START WORKING

